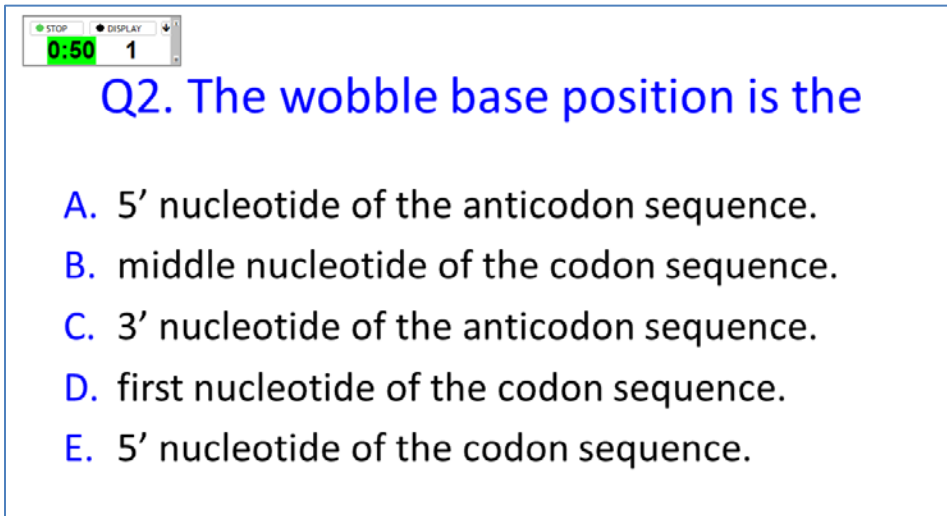


# iClicker Presentation Information

## Layout for PowerPoint Presentation When Using i>Clicker Polling System

1. Ask only 1 question per PowerPoint Slide
2. Label answer choices with "A" "B" "C" "D""E" format with a maximum of 5 choices

A screenshot of a presentation slide from the iClicker system. At the top left, there is a small control window with a green 'STOP' button, a 'DISPLAY' button, a timer showing '0:50', and a question number '1'. The main content of the slide is a question and five multiple-choice options. The question is 'Q2. The wobble base position is the' and the options are A through E, describing different nucleotide positions in codon and anticodon sequences.

Q2. The wobble base position is the

- A. 5' nucleotide of the anticodon sequence.
- B. middle nucleotide of the codon sequence.
- C. 3' nucleotide of the anticodon sequence.
- D. first nucleotide of the codon sequence.
- E. 5' nucleotide of the codon sequence.

3. Be sure the text is large enough for the audience to see from a distance

## How to Operate Instructor Remote for i>Clicker



**Power** Indicator – Blue light

**Low Battery** Indicator

Vote Status – Not used

**Start/ Stop** the i>Clicker Polling Software between questions

After you have stopped polling for a question you can **Hide/Display** the correlated graph

**Go Forward** - Advance your PowerPoint to the next slide


**Go Back** - Return to the previous PowerPoint slide

This option is not used


**Power On/Off** - Always be sure that you see the Blue Power Indicator light on at the top of the remote.

## How to operate the i>Clicker software during a presentation:



1. Make sure the blue Power light is on at the top of the remote. If not push the on/off button at the bottom below the (E) answer button.
2. Use the go forward button (C) on blue instructor remote to advance the PowerPoint presentation.
3. When a slide comes up with a question push the start/stop polling button (A) to activate the timer. It will turn green.



4. Allow 20-25 seconds for audience to read and answer question depending on size of audience.
5. Push the start/stop polling button (A) to stop the time. It will turn red.



6. To display bar graph of answers, push the Display/Hide graph button (B).

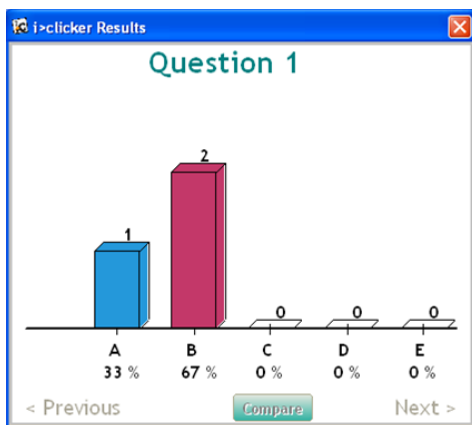

7. To hide the bar graph bar push the Display/Hide graph button again.
8. Advance the PowerPoint presentation again using the Go Forward button (C).
9. If you need to go back to a slide use the Go Back button (D).